



1. Spring hanger
2. Nipple
3. Washer
4. Choke valve
5. Filter
6. Washer
7. Needle valve
8. Cover (Pump)
9. Piston
10. Spring washer
11. Washer
12. Lever (Pump)
13. Shaft (Pump lever)
14. Gasket (Float chamber)
15. Connecting rod (Pump)
16. Shaft (Float)
17. Float
18. Piston return spring
19. Ball (5/32 in.)
20. Weight A (Injector)
21. Primary main air bleed (#60)
22. Primary emulsion tube
23. Primary main jet (#95)
24. Primary slow jet (#43)

25. Washer
26. Drain plug (Float chamber)
27. Secondary main jet (#155)
28. Cap (Idle limiter)
29. Idle adjustment screw
30. Throttle adjustment screw
31. Spring (Throttle adjustment screw)
32. Spring (Idle adjustment screw)
33. Washer
34. Screw
35. Throttle chamber
36. Primary throttle-valve
37. Secondary throttle valve
38. Primary throttle shaft
39. Adjusting plate
40. Washer
41. Connecting lever
42. Sleeve
43. Cotter pin
44. Throttle lever
45. Spring washer
46. Nut
47. Connecting rod
48. Washer

49. Secondary throttle shaft
50. Spring (Secondary throttle)
51. Screw
52. Anti-dieseling solenoid
53. Gasket
54. Gasket (throttle chamber)
55. Servo diaphragm
56. Connecting rod (Choke)
57. Bypass air bleed (#320)
58. Secondary slow jet (#60)
59. Bypass slow jet (#55)
60. Washer
61. Power valve (#4)
62. Secondary emulsion tube
63. Secondary main air bleed (#90)
64. Secondary slow air bleed (#70)
65. Primary slow air bleed (#200)
66. Throttle return spring
67. Choke shaft
68. Sleeve (A)
69. Choke valve spring
70. Clip
71. Choke lever
72. Choke spring
73. Choke chamber